



CAROL'S ROMAN SHADES


MEASURING INSTRUCTIONS

INSIDE MOUNTS


A. Width: Measure width across at inside top, center and bottom of window. Use narrowest measurement when ordering.

Specify on order form if inside clearance has been allowed. We will deduct up to ¼" from each side.

B. Length Measure height of window from top of opening to top of sill. No allowance is made for length.

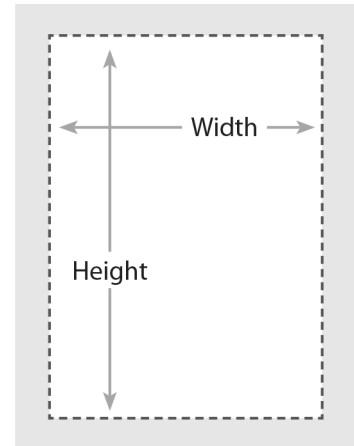

OUTSIDE MOUNTS

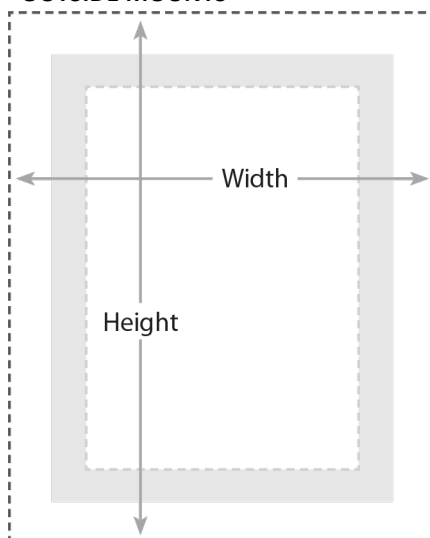

A. Width: Measure exact width of area to be covered. It is recommended that the shades extend past the actual window opening by a minimum of 2" on each side. Specify finished shade width; no allowance will be made.

B. Length Measure length of area to be covered allowing a minimum of 2½" at the top of window to accommodate headerboard and brackets. Provide the finished shade length, as no allowance will be made. At this point you may want to take into account the stackage of the shade. On shade styles with a pouf, please specify whether length given is bottom, or high point of pouf.

130 MASON CIRCLE, SUITE K
CONCORD, CA 94520

WWW.CAROLSRMANSHADES.COM


TOLL FREE: 1.800.422.1210



CAROL'S ROMAN SHADES

BAY WINDOW ROMAN SHADES


Please include diagram when ordering **BAY WINDOW** (links to PDF file) shades. Give actual back wall measurements for A, B, & C. We will make allowance for a 45° mitered installation.

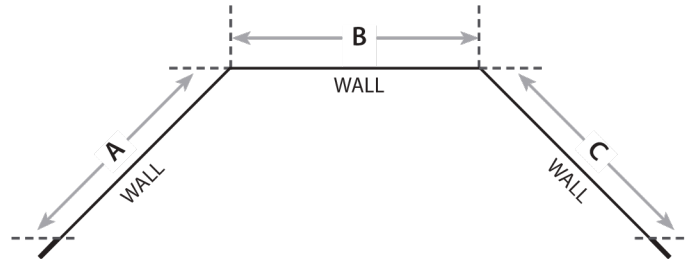

CORNER WINDOW 90°

Please include diagram when ordering **CORNER WINDOW** (links to PDF file) shades. Give actual back wall measurements for A & B. We will make allowance for a 90° mitered installation.

NOTE: if angle is $\pm 90^\circ$ please supply angle of corner.

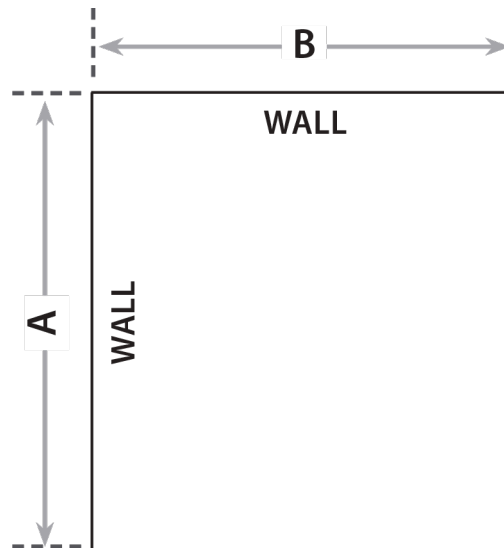

PLEASE NOTE: When Carol's Roman Shades, Inc. makes deductions for CORNER and BAY windows, we plan for a mitered corner installation. We do not make deductions for a butt/pass installation unless specifically asked to do so on order forms.

130 MASON CIRCLE, SUITE K
CONCORD, CA 94520

WWW.CAROLSRMANSHADES.COM

TOLL FREE: 1.800.422.1210